



## Quick Tips for Sunstream Owners

- If applicable, always Open the Boathouse door BEFORE operation
- If you have multiple lifts, label which remote control operates which lift
- The remote is 'push and hold' to operate the lift.
- Lower your SunLift from the top position until it is at a height that you can easily get on and off your boat from your dock. Load passengers onto boat
- When driving onto the SunLift, there is no need to power the boat when coming onto it
- When raising the SunLift, lightly tap the button(s) for ease of adjustment and let the lift center your boat on the lift
- If you have passengers, let them off at dock level, then proceed to lift the rest of the way
- Raise your boat all the way up when lifting. Otherwise, you can leave your boat at the desired position. When away from the dock, always raise your lift when the boat is on it
- If you have guide- ons, you can line up the load guide with something on your boat to insure consistent, simple lifting
- The Front Guide- on generally lines up approximately with the throttle area
- Call your Product Specialist for if you have any questions at any time



**SERVICE ABOVE ALL.**